

DRAGON
WAR

HEPTAESTUS
PRO-GAMING MOUSE



DRIVER



MANUAL

[HTTP://WWW.DRAGONWAR.JP](http://www.dragonwar.jp)

MOUSE **G26**

USER MANUAL
PROFESSIONAL GAMING MOUSE



CONTENTS

PACKAGE CONTENTS / SYSTEM REQUIREMENTS	02
GAMING MOUSE LAYOUT	03
INSTALLING YOUR DRAGONWAR G26 MOUSE	04
CONFIGURING YOUR DRAGONWAR G26 MOUSE	05
ALTERNATE MOUSE BUTTON	06
SENSITIVITY OPTIONS	07

PACKAGE CONTENTS / SYSTEM REQUIREMENTS

PACKAGE CONTENTS

- Dragonwar G26 Gaming Mouse
- User Manual

SYSTEM REQUIREMENTS

- PC with a free USB 2.0 port
- Windows 10 / Windows 8 / Windows 7 / Windows Vista / Windows XP


TECHNICAL SUPPORT

- 1 years limited warranty
- Free online technical support at www.dragonwar.jp
- Driver download from : www.dragonwar.jp

TECHNICAL SPECIFICATIONS

- Customizable ergonomics to fit all hand sizes
- 6400dpi Optical sensor system
- Gold plated connector
- Braided USB cable


GAMING MOUSE LAYOUT

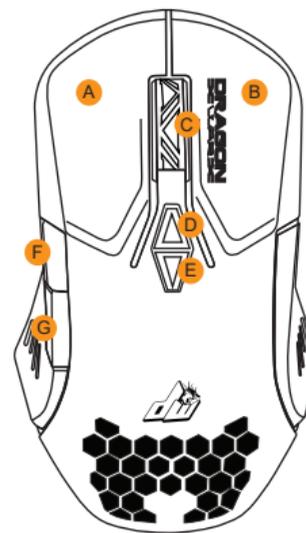

- A. Left Mouse Button
- B. Right Mouse Button
- C. Scroll Up / Down
- D. Sensitivity Stage Up
- E. Sensitivity Stage Down

- F. Forward
- G. Backward

INSTALLING YOUR DRAGONWAR G26

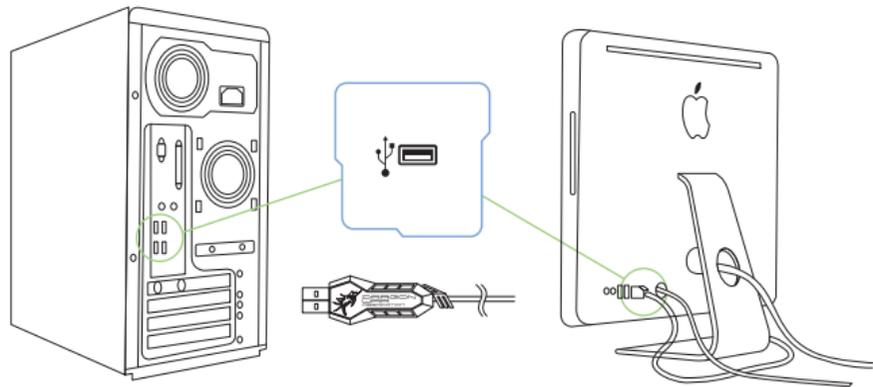

- Step 1: Plug the Dragonwar G26 into the USB port of your computer.
- Step 2: Run the installer and follow the Programme.
- Step 3: Wait until the software automatically downloads and installs.
- Step 4: Open the programme, then set up

CONFIGURING YOUR DRAGONWAR G26

MOUSE TAB

The Mouse Tab is your default tab when you first install Programme. This tab allows you to customize your device's profiles, button assignments, performance and lighting.



ALTERNATE MOUSE BUTTON

Initially, each of the mouse buttons is set to DEFAULT.

Which you can choose from the Assign Button submenu

- 1 Left Handed
- 2 Right Handed
- 3 3D Handed
- 4 Forward
- 5 Back
- 6 DPI +
- 7 DPI -



SENSITIVITY OPTIONS

Sensitivity pertains to how much effort is needed to move the mouse pointer in any direction. The higher the sensitivity, the more responsive the mouse will be.

1. Select the number of sensitivity stage needed.
2. Click on the stage you would like to preset and adjust using the arrow on the slider below.
3. Click "Apply" when done. To switch between different sensitivity stages, simply assign the Sensitivity Stage Up and Sensitivity Stage Down functions to the desired buttons.



BREATHING LIGHT SETTING

Each of the mouse buttons is set to DEFAULT. However, you may change the function of these buttons by clicking the desired button to access the BUTTON ASSIGNMENT Menu.

